

CM1620

充 电 模 块

用户指南

ISDT

感谢您购买ISDT CM1620充电模块。

欢迎您登陆艾斯特官方网站www.isdt.co了解更多产品功能。

由于产品功能的不断更新，您手中的说明书可能会与实际操作有所出入。请以实际功能为准。

警告与安全提示

为确保您的安全和良好的用户体验，请在使用本产品前阅读本说明和警告。

- 不要在无人值守情况下使用本产品，如产品出现任何功能异常，请立即终止使用并对照说明书查阅原因。
- 确保产品远离灰尘、潮湿、雨和高温，避免阳光直射及强烈震动。
- 请将产品放置于耐热、不易燃及绝缘的表面。不要放置在车座、地毯等类似的地方使用。
- 请确保易燃、易爆物品远离产品的操作区域。
- 确保您已充分了解所使用电池的充放电特性及规格，并在产品中设置恰当的工作参数。
如参数设定错误，可能对产品及电池造成损坏，甚至发生火灾、爆炸等灾难性后果。

接入电池前请确保电池电压与本产品工作电压范围相符；
工作过程中请确保选择的串数与接入电池串数一致。



警告!



远离火源!

使用过程中确保本产品远离热源及潮湿环境，并注意通风散热；
本产品工作过程中将产生大量热量，切勿让儿童操作，以免烫伤；使用结束后，应尽快断开及移除电池。

产品规格

型号：CM1620

最大输入功率：1100W

最大输出功率：1000W

输入电压范围：DC 11~70V

输出电压范围：DC 8~70.4V

输出电流：1~20A

支持电池类型及串数：LiHv, LiPo, LiFe 2~16S

工作温度：0~40℃

存储温度：-20~60℃

电池电压异常报警：支持

串数设定错误报警：支持

尺寸：105×165×41mm

重量：约636g

状态指示图标



充电中



充电完成



错误警告



蓝牙连接中



 
 
 
待机

 


升级中




📖 接口 / 按键

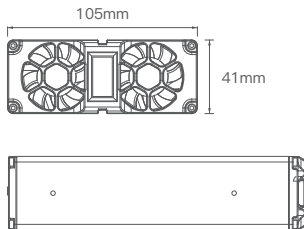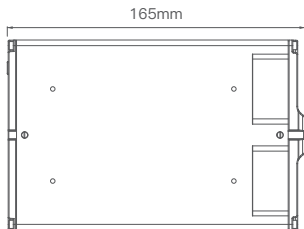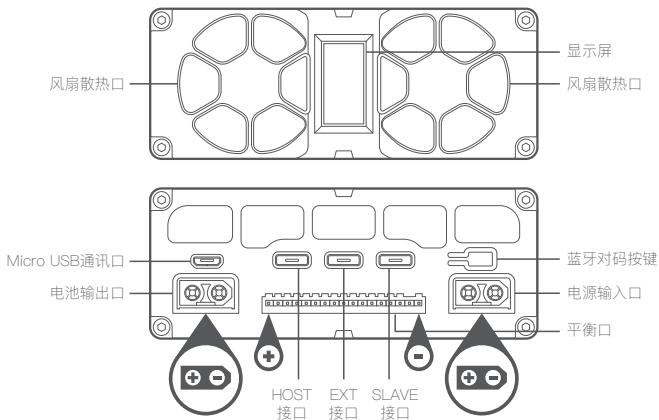

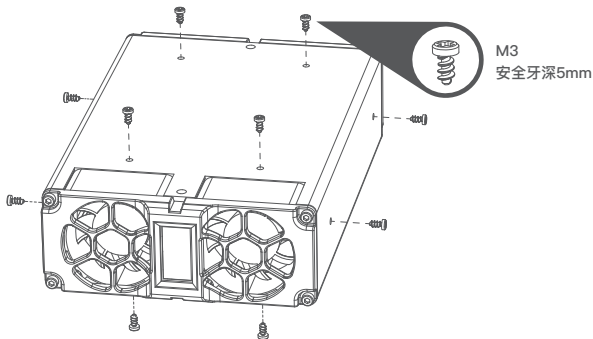


🔖 连接方式

 
- 通过Micro USB接口与PC端进行连接，在PC端软件上进行控制。

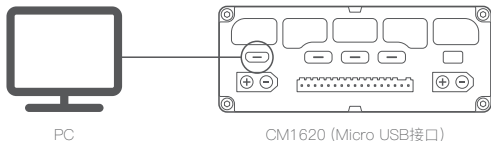

- 通过蓝牙连接移动端设备，在移动端App上进行控制。

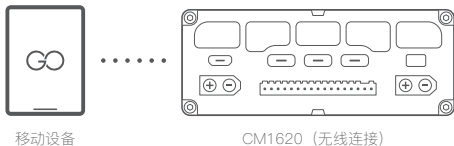 

- 通过HOST接口连接控制主机。

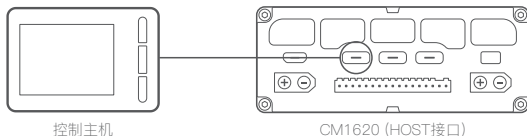 


控制主机

CM1620 (HOST接口)

并联

充电模块可以通过并联增大充电输出功率，支持3个模块并联，最大充电电流为50A。

 并联连接方式如下图所示。

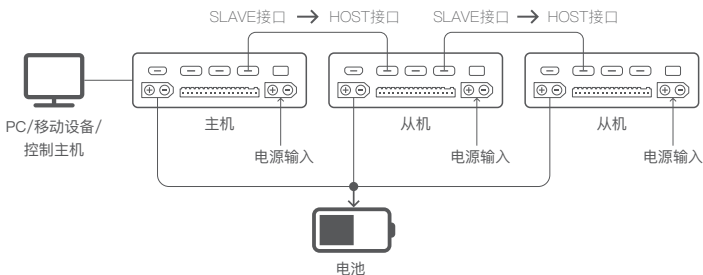

扫码获取更多详细信息



*本产品所有图片、声明及文字资料仅供参考，实际信息请参考官方网站 www.isdt.co。

深圳艾斯特创新科技有限公司拥有对本说明书内容的最终解释权 and 修改权。

CM1620

CHARGING MODULE

USER GUIDE



Thanks for purchasing the ISDT CM1620 Charging Module.

Please visit: www.isdt.co for more details on the functions of this charging module, as well as purchase various accessories. Functions of products will be kept on upgrading, the manual in your hand may be different from the actual operation, please refer to the actual functions.

Warnings and Safety Tips

**For your safety and a better user experience,
please read this manual and follow the instruction before using the new charger.**

- Never use the charger without supervision, please stop using the charger and refer to the manual for reasons if any functional abnormality.
- Keep the charger away from dust, humidity, rain and high temperature, as well as avoid direct exposure to the sunlight and intense vibration.
- Place the charger on a heat-resisting, non-flammable and insulating surface.
Do not use it on the car's seats, carpet or other similar places.
Keep inflammable and explosive objects away from operation areas of the charger.
- Read the instruction manual carefully to be familiar with the features of the charger, and set proper charging parameters before operating. Setting the parameters incorrectly will result in damage to the product, personal property and cause serious injury as well.

Specifications

Model No.: CM1620

Max. input power: 1100W

Max. output power: 1000W

Input voltage: DC 11~70V

Output voltage: DC 8~70.4V

Output current: 1~20A

Supported battery: LiHv, LiPo, LiFe 2~16S

Abnormal voltage alarm: Support

Incorrect cell count setting alarm: Support

Working temperature: 0~40°C

Storage temperature: -20~60°C

Dimension: 105×165×41mm

Weight: About 636g

Symbol



Charging



Charge
Done



Error



Bluetooth
Connection



 
 
 
Standby

 


Under
Upgrade




Interface / Button

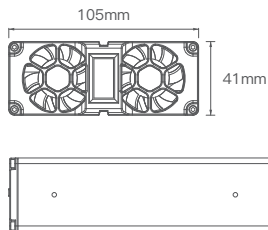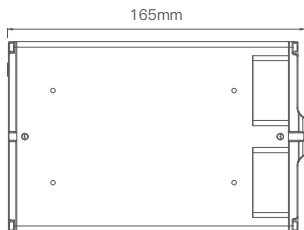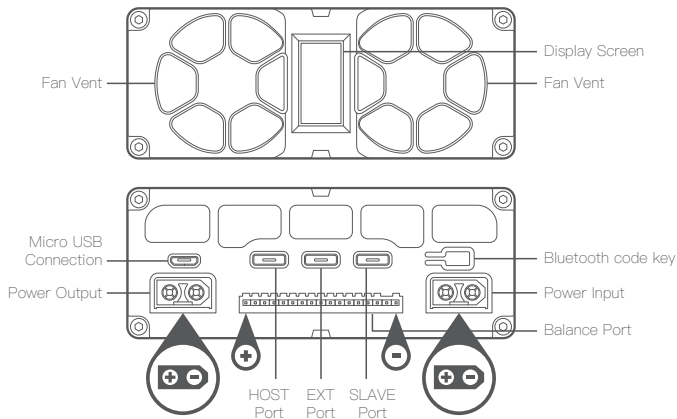

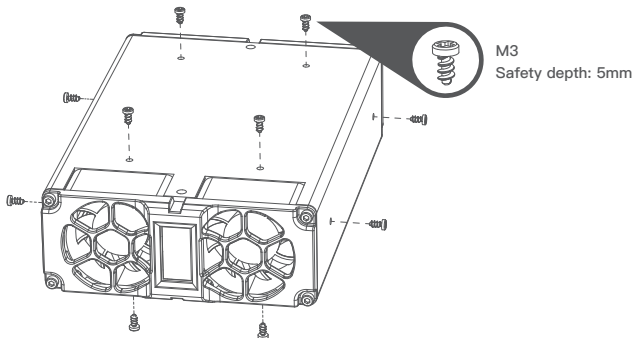


Connection methods.

 
- Connect to PC via Micro USB port and control it on PC software.

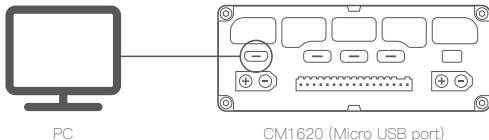

 - Connect to the mobile device via Bluetooth and control it on the mobile App.

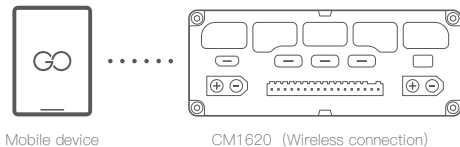


 - Connect the controller with HOST port.

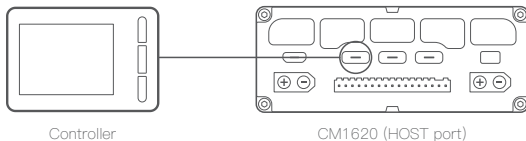

Parallel

 The charging module can increase the charging output power through paralleling, supporting 3 modules paralleling, and the maximum charging current is 50A. The paralleling connection method is shown in the figure below.

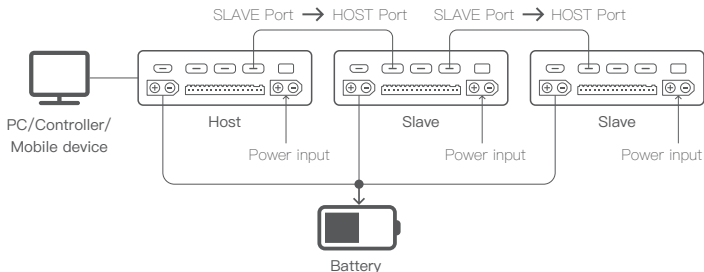

Scan the code for more information

